


# homesmart<sup>®</sup>

## USER MANUAL AIR FRYER

MODEL: ZG50WS

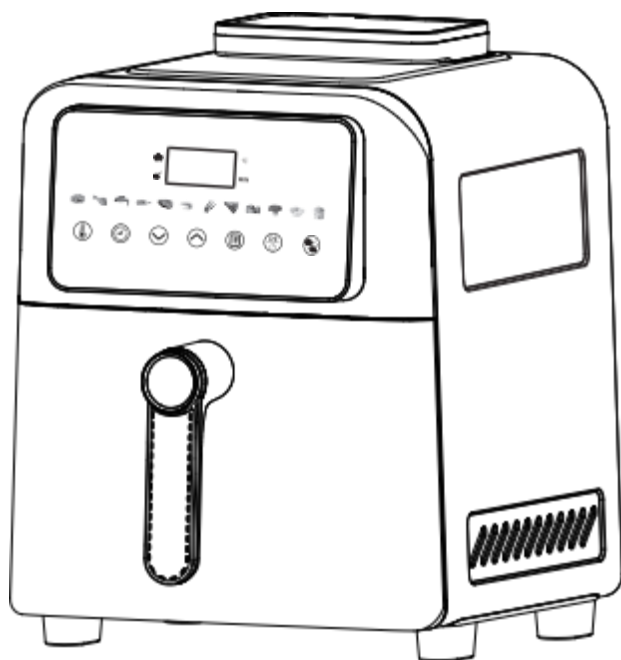






## Safety Precautions

1. This product is not intended to be used by children or people with physical, sensory or mental impairments. Unless someone responsible for their safety supervises and instructs them related to the use of the product. Children should be taken care of and ensure that they do not play with this product.
2. This product is for household use only. The company is not responsible for any malfunction caused by any commercial use, improper use or use that fails to comply with this manual. Such malfunctions and damages are not covered by the warranty.
3. It is strictly forbidden to use the product for purposes other than food heating.
4. After opening the package, please put the plastic bag in the trash can immediately to prevent children from playing and causing the danger of suffocation.
5. All packaging materials must be removed before use, otherwise the product may cause fires, burns during the working process.
6. Before connecting the power supply, please check whether the voltage marked on the product is consistent with the voltage of the power supply to avoid damage to the device or fire.
7. 15A or above socket with a ground must be used separately, and the hand must be completely inserted into the socket to prevent poor contact from overheating and burning the components, causing short-circuit or fire hazards.
8. Do not operate this product on flammable materials such as carpets, towels, plastic, paper, etc., to prevent fire.
9. Do not use this product on an unstable, humid, high-temperature, smooth, or heat-insensitive table surface to avoid injury, accidents and property damage caused by electric shock, fire, or slipping.
10. Do not let the product work unattended to prevent fires and other hazards caused by scorched ingredients.
11. Do not use this product under or near combustible materials such as curtains and closets to prevent fires.
12. Before using for the first time, please take out the fryer and bakeware and wash them in alkaline solution. After cleaning, preheat for 10 minutes to eliminate the peculiar smell remaining during packaging or transportation.

13. When using the product, leave enough space around and keep a distance of at least 10cm from surrounding objects.
14. There may be a small amount of smoke or a slight peculiar smell at the first time use, which is normal.
15. During use, make sure that the food does not touch the heating tube, and do not roast too big size food, otherwise it will cause smoke and fire.
16. It is strictly forbidden to put any flammable materials such as paper or plastic in the Air fryer to avoid fire.

17. Do not place explosive materials such as glassware, airtight containers into Air fryer to avoid explosion.
18. During use, please do not put bagged, canned or bottled items, cotton gauze or flammable materials on Air fryer or cover the Air fryer to avoid fire and explosion.
19. The product will generate high temperature and steam during work. Please do not touch it with your hands or bring your face close. Be very careful when pulling out the fryer. Hot steam may gush out from the Air fryer.
20. Please use high-temperature insulation objects to avoid scalding.
21. After use, please cut off the power supply, and clean the cavity after the Air fryer cool down.
22. If the power cord is damaged, it must be replaced by professionals from the manufacturer or maintenance or similar departments.
23. Do not use steel wool to clean the Teflon coating bakeware and Air fryer pot.
24. The appliances are not intended to be operated by means of an external timer or separate remote-control system.
25. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
26. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years.


## Using automatic programs

1. Proceed as described under *Preparing the unit* and tap the  key.
  - The first automatic program  shows and flashes on the display.
2. Tap the  key. The food is now being cooked. The display changes between temperature and remaining running time. Audible beeps indicate that the


preset processing time has elapsed with display shows "End".

3. Use fryer handle to pull out the fry pot.
4. Transfer the cooked food into a heat-resistant container.
5. Remove the plug from the wall socket.
6. Allow the fry pot and grill to cool down.
7. Clean the fry pot and grill as described under *Cleaning, maintenance and storage*.

## Schematic diagram of components

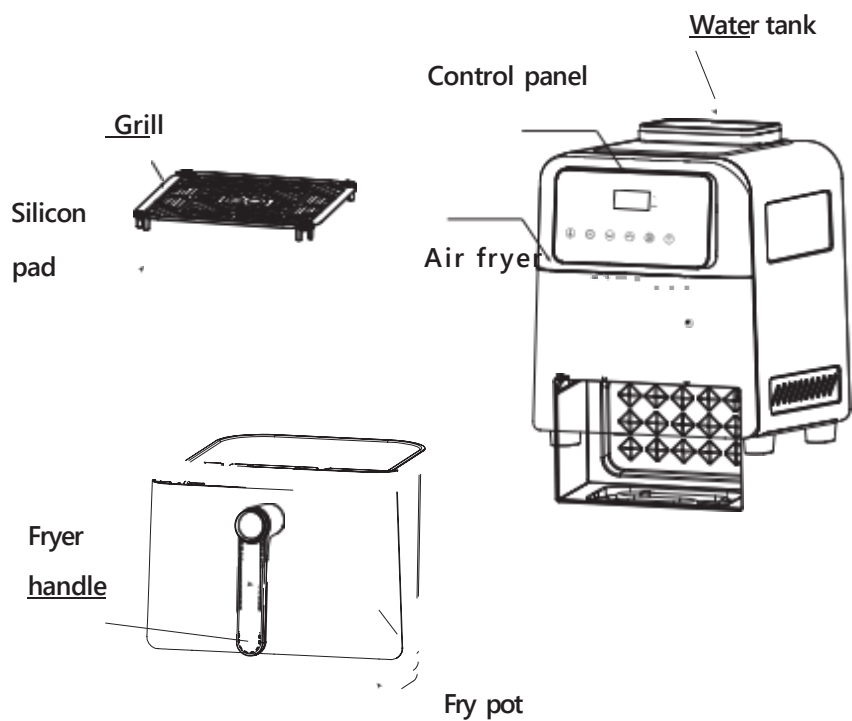



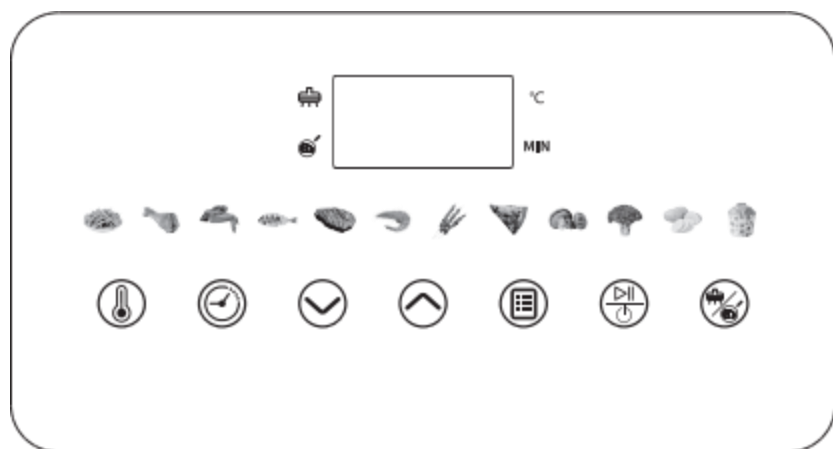




## Instructions for use





## Panel display operation instructions

N O.	Icon	Function	Descriptions
1	°C/ Min	Display window	Display time and temperature
2		Power on/off	Air fryer plugin the wall socket, this icon would on and keep flashing shows POWER ON.
		Start/ Stop	<ol style="list-style-type: none"> <li>1. After selecting the designated function, press this key to startthe working.</li> <li>2. During working, press this key to stop working.</li> </ol>
3		Recipes	<ol style="list-style-type: none"> <li>1. Press this key to cycle through the cooking modes fordifferent recipes.</li> <li>2. All recipes have set default time and temperature, but user can adjust time and temperature according to food quantity and size.</li> </ol>
4		Temperature key	<ol style="list-style-type: none"> <li>1. Before air fryer working, press temperature key to setworking temperature, press“^” or “v” key to increase or reducetemperature, adjustable range: 60°C~ 200°C.</li> <li>2. During working, press temperature key to adjust temperature, press“^” or “v” key to increase or reduce temperature.</li> <li>3. One step 5 degree.</li> </ol>
5		Timer key	<ol style="list-style-type: none"> <li>1. Before air fryer working, press timer key to set working time, press“^” or “v” key to increase or reduce time, adjustable range: 1-90mins.</li> <li>2. During working, press timer key to adjust time, press“^” or “v” key to increase or reduce time.</li> </ol>
6		Plus key	Press this key to increase time and temperature. Long pressing can keep increasing.

7		Minus key	Press this key to reduce time or temperature. Long pressing can keep reducing.
8		Water spray key / Pan-fry key	Press this key to spray water or pan-fry meat.  Before starting: Press this key to enter the fryer frying function.  Working: Press once and spray for 1 second.  Press and hold for 3 seconds to spray once every 3 minutes, then press and hold to cancel the long spray function.


**Lighting:** This product has built-in lighting, after power, the furnace light has been on, into the standby, the furnace light is extinguished.

# Water spray key / Pan-fry key function operation instructions

1. After power-on, "E" and " " flash. (Picture A)

1.1). Select " " to enter the air fryer recipe. (Picture B)

1.2). Select " " to enter the Pan-fry function, place the meat in the bottom of the fryer pot and adjust the time according to the meat. (Picture C)

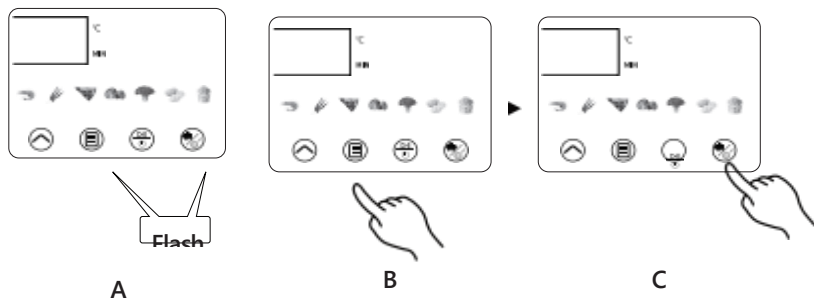

2. Click " ", then " " and " " flash. (Picture D)

" " light on and frying start. working, also " " light on


(Picture E). It means:

3.1). In this cooking process, program includes water mist spraying automatically.

3.2). In this cooking process, touch " ", will spray water mist too.

4. In the frying work, " " and " " indicator light is on, press " " one time the air fryer spray water mist once, unlimited times. Press " " and hold for 3 seconds, the air fryer will keep spraying water mist every 3 minutes until cooking process end, but touch " " again to cancel the continuous spraying function.



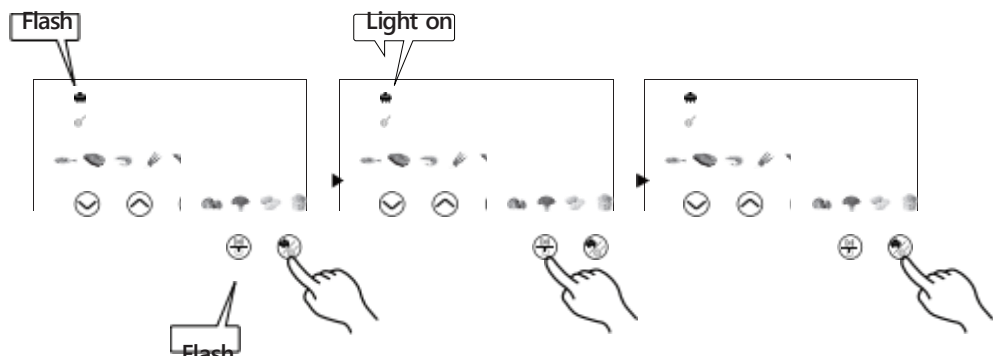

(Picture F)




D





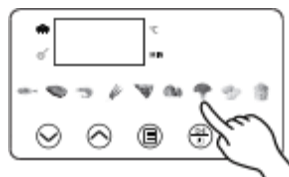


E





F

5. If select "E" to enter the air fry programs, , , ,  can still choose to enter the pan-fry function (as 1.2) or press "F" button to start the air fry program. (Picture G)



## Recipes

Icon	Function	Default time (Mins)	Default temperature (°C)	Adjustable time (Mins)	Adjustable temperature (°C)	Water spray function (Yes / No)	Remark
	French fries	17	200	10 – 25	160 – 200	No	/
	Chicken Leg	25	200	10 – 35	160 – 200	Yes	Air fry or fried 2 cooking mode for option.
	Chicken Wing	18	200	10 – 25	100 – 200	Yes	Air fry or fried 2 cooking mode for option.
	Fish	18	180	10 – 20	160 – 200	Yes	Air fry or fried 2 cooking mode for option.
	Beef	10	200	10 – 25	100 – 200	Yes	Air fry or fried 2 cooking mode for option.
	Shrimp	9	200	5 – 20	160 – 200	Yes	/
	Skewers	18	180	10 – 60	100 – 200	Yes	/

	Pizza	17	160	10 – 30	100 – 200	No	/
	Mushroom	12	180	5 – 20	100 – 200	Yes	/
	Vegetable	15	160	10 – 25	100 – 200	Yes	/
	Potato	50	170	10 – 60	100 – 200	Yes	/
	Cup Cake	15	160	10 – 25	100 – 200	No	/

**Note:** Keep in mind that these settings are indications. As ingredients differ in origin, size, as well as brand, we cannot guarantee the best setting for your ingredients. You may adjust the cooking times and temperatures to make your best taste.

## Other functions description

NO.	Functional status	Operating	Description
1	Power-on	Power on the whole machine	<p>The buzzer beeps one time, and all the lights are on for 1 second (including the digital tube), the power key would keep flashing and then the unit enters the standby state.</p>
2	Power-off memory	Power-off memory	<p>1. During working, pull out fry pot, air fryer will stop working but keep memory, after inserting fry pot into unit, will continuous working.</p> <p>2. During working, if power off suddenly, air fryer stops working, when power on, Air fryer will continuous last unfinished program.</p> <p>3. User to press power key to switch off, air fryer don't keep any memory.</p>
3	Air fryer cooling	Cooling	<p>1. During working, press power key to switch off air fryer, fan will continuously works 10 seconds to cool fry pot.</p> <p>2. When air fryer completes any programs, fan will continuous working 10 seconds to cool fry pot.</p>
4	End of work	/	<p>The buzzer beeps 3 times and displays "END" on display window, air fryer enters the standby state.</p>

### Notes

1. For the first time using, preheat air fryer 15 minutes to remove peculiar smell, if smell peculiar smell when you use it fir the first time. It is a normal and is not malfunction of air fryer.
2. Please set heating temperature and time according to the recipe or personal preference.
3. When the process is finished, the air fryer will "beep" to remind user and stop working.

4. Please use anti-scalding gloves to remove the fry pot, and use heat-resistant and heat-insulating objects to carefully remove the food from the fry pot.

### **Warning**

- 1 ) The door or the outer surface may get hot when the appliance is operating.
- 2 ) This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments
  - farm houses
  - by clients in hotels, motels and other residential type environments
  - bed and breakfast type environments.



## Cleaning and maintenance

1. Before cleaning Air fryer, please cut off the power and unplug it, till Air fryer cools down completely.
2. If there is greasy dirt in Air fryer, please wipe it with a soft damp cloth.
3. Use a neutral detergent to clean all accessories including the fryer and basket.
4. Do not immerse the Air fryer in water or other liquids for cleaning to avoid electric shock or malfunctions.
5. After cleaning, store the product in a cool and dry place after it has dried.
6. Do not use steel wool to clean the Teflon coating grill and Air fryer pot.

## Technical Specification

Rated Voltage	Rated frequency	Rated power	Capacity
220-240V~	50-60Hz	1500-1700W	6L

## Anomaly analysis and treatment

Problemnon	Reason	Approach
Air fryer don't work	The power supply is not plugged in.	Plug the power cord into wall socket.
	After setting or selecting the function don't press power key.	After setting or selecting the function, make sure to press power key to start the cooking. The icon of the selected

		function is light on.
	The fry pot is not in place.	Put out and insert the fry pot again until a beep signal is heard.
Food is not roasted well still work	There is too much food in fry pot.	Roast food in more times.
	Roasting times is not enough.	Increase roasting time.
The food is not evenly roasted	Did not shake or flip food during roasting.	Pull out of the fry pot and shake flip food during thr roasting process.
Food surface is not crispy	Temperature is too lower.	Adjust temperature higher.
Pull out fryer pot, air fryer	Door switch broken or stuck.	Repair or change door switch.







**IDEAL WORLD**

PO Box 443, Feltham TW13 9DU  
Email: [customercare@idealworld.tv](mailto:customercare@idealworld.tv)  
Tel: 0800 151 2345