 


homemart[®]

Easy Crisp Air Fryer

Operating and Safety Instructions

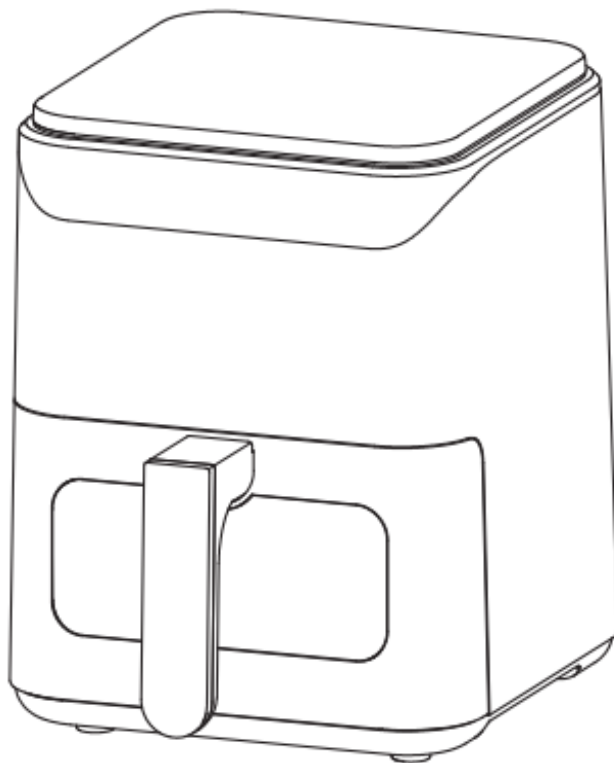

MODEL NO.: GSE031-1

- FOR INDOOR HOUSEHOLD USE ONLY -

Before you Begin

It is essential to read the entire manual to ensure that you are fully familiar with the operation and precautions of the product.

- Not only can you cook your favourite fried food, but you can also grill many other favourite foods, such as air-fried burgers, pies, and donuts.
- Simple operation: 10 one-button preset setting modes, used for some of your favourite crispy prawns, French fries, and southern-style chicken, drying fresh fruits and other foods, etc., which is conducive to preservation for future use.
- There is also a custom preset and heating preset, We all like fried foods such as crispy fried chicken, French fries, coconut prawns, spicy chicken wings, and the list goes on. These delicious foods have become part of our daily diet. Until now, getting that delicious, crispy texture without deep-frying in deep oil or oil was impossible.
- Good news! The easy crisp air fryer has changed everything. Our air fryer almost eliminates oil from the process. Oil is replaced by warm air, making food crispy and juicy.
- Important: When using electrical appliances, you should always follow basic safety precautions.

Product Specifications

220-240V~,50/60Hz, Class I Model: GSE031-1: 1200-1400W.


Cautions:

Please carefully read the instruction manual before using the product. Keep the manual for reference in the future.

- The product contains electronic elements and heating elements.
- Do not put it in water or wash it in water.
- Do not cover the air inlet and outlet during the operating process.
- Do not touch the inside of the product, avoid scalding.
- To prevent the food from contacting the inner upper wall and heating element, do not fill up the kebabs, barbecue shafts, or airflow racks.
- Do not fill the oil in the basket or drawer, otherwise, it may cause a fire.
- If the machine emits black smoke, unplug it immediately and take out the contents after the smoke stops.
- During the working process of the product, the high-temperature air is discharged through the outlet. Please keep a safe distance.
- Do not put your hands and face near the power outlet. When removing food, be careful of warm air.
- Do not damage, strongly pull, or twist the power cord, use it to carry heavy loads, or transform it, to avoid electric shock, fire, and other accidents.

- If the supply cord is damaged, it must be replaced by the manufacturer and its service agent or similarly qualified persons to avoid a hazard.
- Please do not plug and unplug with wet hands, otherwise, it easily causes an electric shock.
- Please keep the plug clean to avoid disaster.
- Physical or mental disability person or person, lack in experience and knowledge on how to use the product, be guided by a person with use experience to use the product and responsible safety.
- Plug tightly, otherwise, it is easy to cause electric shock, short circuit, smoking, sparking, and other dangers.
- Do not allow children to contact the socket and plug to avoid electric shock.
- Keep the product away from children to avoid scald, electric shock, and/or other damages.
- Do not place the product on or near flammable or explosive material, such as tablecloths, curtains, and others, to avoid fire hazards. Please place the produce 30cm away from the wall or furniture to avoid damage to the wall or furniture.
- The appliances are not intended to be operated using an external timer or separate remote-control system.
- This appliance is intended to be used in households and similar applications such as:
 - staff kitchen areas in shops, offices, and other working environments.
 - farmhouses.
 - by clients in hotels, motels, and other residential-type environments.
 - bed and breakfast type environments.
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understanding the hazards involved. Children shall not play with the appliance.
- Children shall not make maintenance unless they are older than 8 and supervised Keep the appliance and its cord out of reach of children less than 8 years.
- This appliance may be operated under both 50Hz and 60Hz without any adjustment.

Note: open all listed accessories from the package. Remove the transparent or blue protective film from the part.

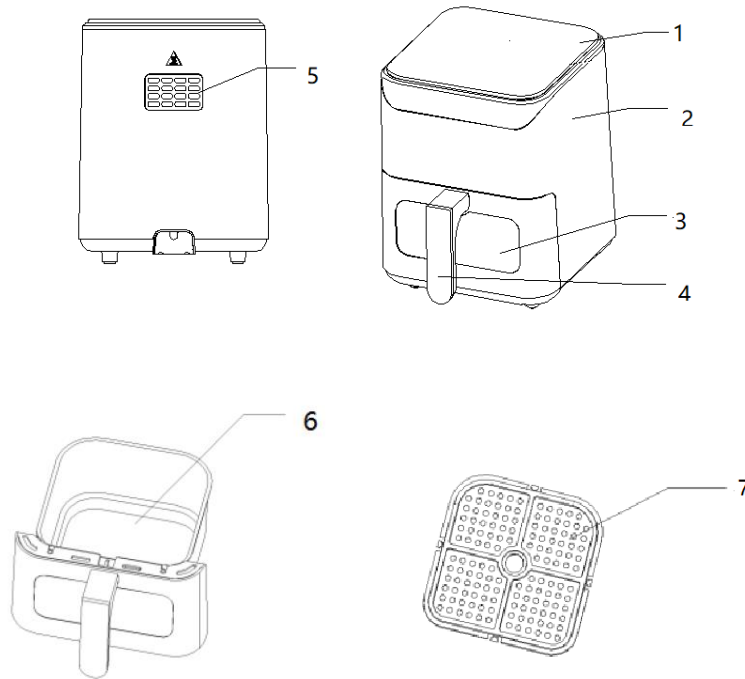

- | | | | | |
|--------------|----------|---------------|-------------------|----|
| 1. Top cover | 2. Body | 3. Body | 4. Viewing Window | 5. |
| Air outlet | 6. Fryer | 7. Baking net | | |

Preparation for the first use

1. Take out the fryer and fried basket and remove the bubble wrap.
2. Clean the fryer and baking tray with warm water, wipe the sides and bottom of the grill with a damp cloth soaked in detergent, and allow to dry completely before use.
3. Place the electric grill on a smooth surface and use a separate power cord.
4. Allow enough space around the oven to ensure that the surface is at least 10 cm away from other objects and that no objects are placed on the air outlet.

Note: when used for the first time, it is necessary to preheat the electric oven for 5 minutes to clear out the residual oil fume. When the first user smells the odour, this is a normal phenomenon, non-electric oven failure.


Instructions for use :

1. Place the food in the fried basket.
2. According to the height of the food, reasonably place it in the baking pan.
3. Put the baking pan and food into the fryer and push it into the electric grill. Set your desired heating temperature according to recipe or personal preference.

Steps to use:

Tip: The "Start" and "Cancel" functions are set on the same icon on the digital touch control model.

1. The "temperature" and "time" functions on the operating panel are set on the same icon, with two other icons "+" and "-". By pressing one of these ICONS, the temperature rapidly decreases or increases by 5°C, and the time rapidly decreases or increases by 1 minute.
2. Determine the time required to cook the ingredients. Please use the "time adjustment icon" to adjust the time required to cook the ingredients.
Note: Please switch to the time function before adjusting the time.
3. After determining the required temperature and time for cooking the ingredients, please touch the "Start" icon in the function operation panel gently.
4. When you hear a "drip" tone, the set cooking time has been reached and the interface displays "00:00", the fan will stop working after 30 seconds. At this point, pull the fryer out of the product and place it on the heat-resistant table.

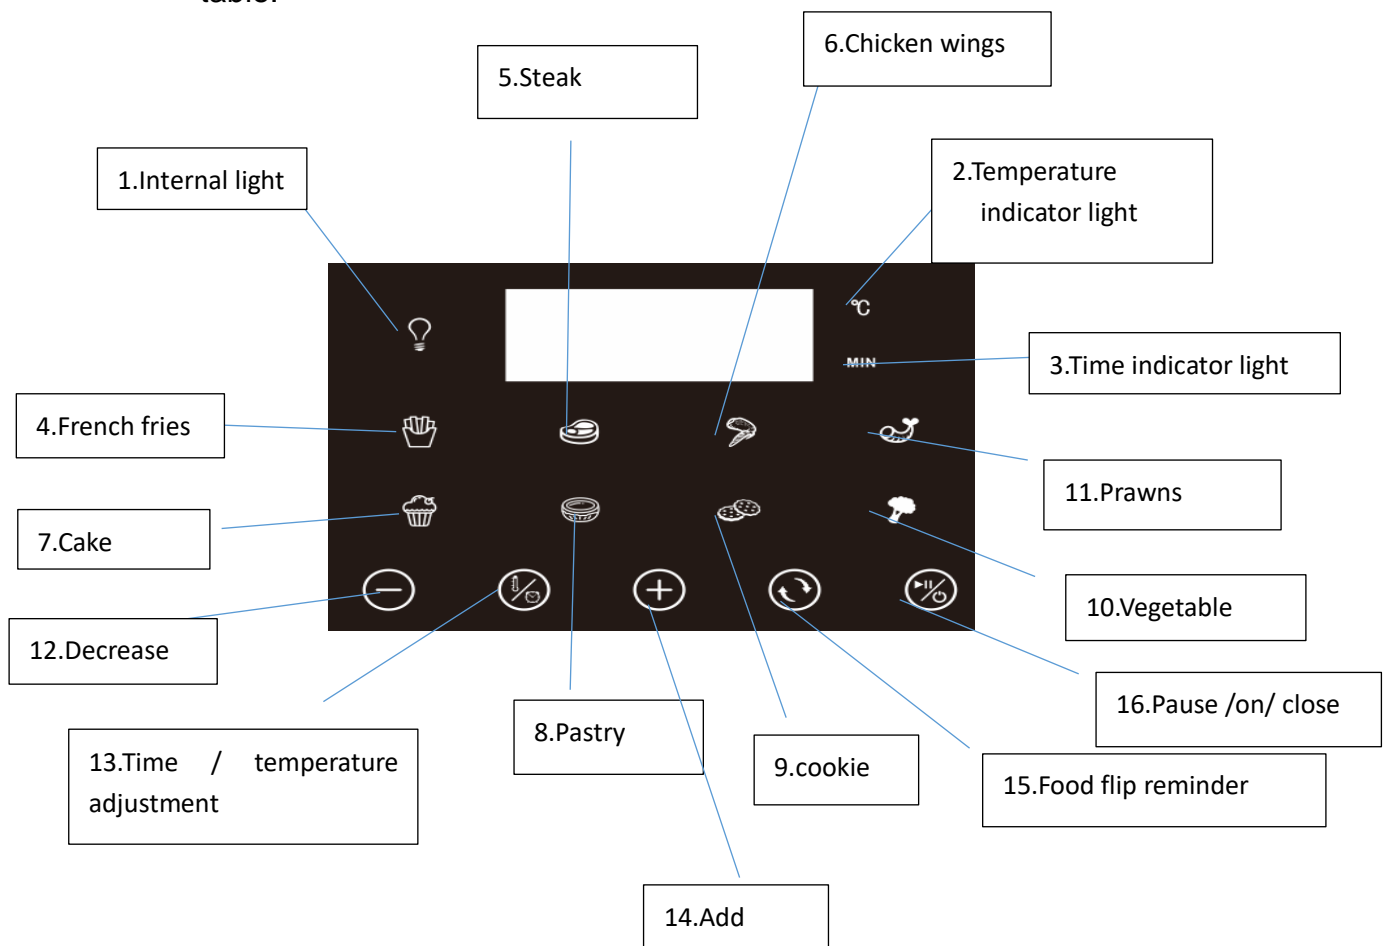


Cleaning and storage

1. Cleaning: remove the power cord from the wall socket and ensure that the equipment is thoroughly cooled before cleaning.
2. Wipe the outside of the appliance with a warm cloth and mild detergent.
3. After each use, the rotating basket and other accessories are made of durable stainless steel.
4. Do not use abrasive cleaning materials or utensils on these surfaces.
5. Caked food should be soaked in warm soapy water for easy removal.
6. To clean the unit door, please lift it to an angle of 45 degrees, gently pull it up, and clean both sides with a wet cloth stained with warm soapy water.
7. Do not immerse the door in water or water, and do not wash it in the dishwasher.
8. Clean the interior of the appliance with hot water, mild detergent, and a nonabrasive sponge.
9. If necessary, remove the excess food residue on the upper screen with a soft brush.

Storage

1. After the fan cools the unit, unplug the equipment, and let it cool completely.
2. Ensure that all parts are clean and dry.
3. Place the appliance in a clean and dry place.

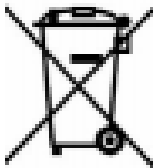Correct Disposal of this product	
	<p>This marking indicates that this product should not be disposed of with other household wastes throughout the EU. To prevent harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.</p>

ANOTHER EXTRAORDINARY PRODUCT FROM

SHOP LC

www.shoplc.com

tjc

www.tjc.co.uk

SHOP LC
PREISWERTE QUALITÄT

www.shoplc.de